[redacted]

POWER ON

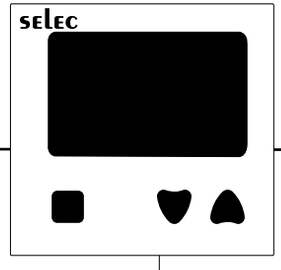

R.

[redacted]

[redacted]

INP	Input type (Refer Table 1)	J/Pt d*	J / K / RTD*	—
UNt	Temperature unit	°C	°C / °F	—

[redacted]

ONF
2S
NO

[redacted]

tUN	Tune (Refer user guide)	OFF	OFF / AT	For CNT=PID

[redacted]

[redacted]

1. Locking parameters (LV1 or LV2 or SP) will not permit change in the value of respective level parameters.
2. Continuos operation of ■+▲/▼keys for SP or other parameters makes Update speed faster in 3 stages after 3 seconds.

[redacted]

Range: SP.L to SP.H

To view setpoint: Press the■key.

To increase/decrease setpoint: Press ■+▲/▼keys.

NOTE: * Not Applicable for TC Model