Terminal connections

XT264-3

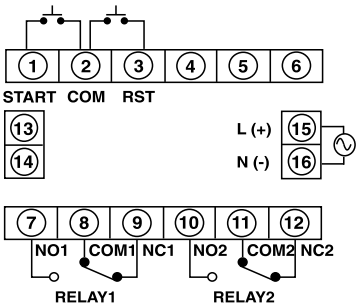

XT264A

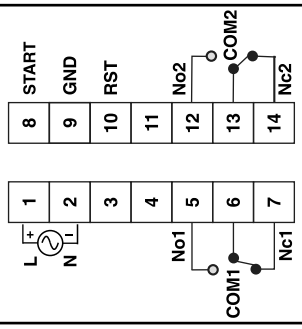

XT364-3

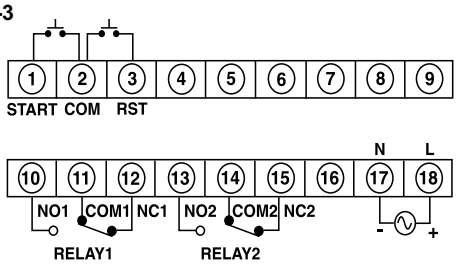

XT364A

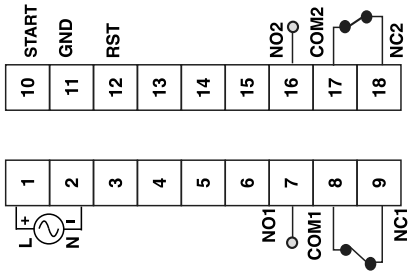

Timing diagrams

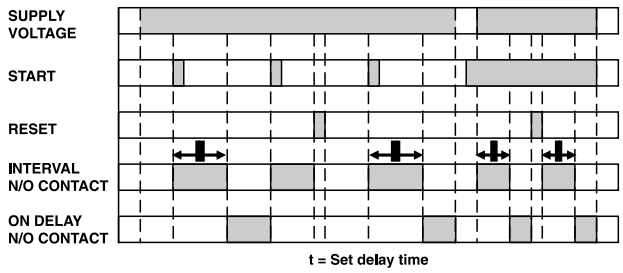

DIP switch setting for mode selection

MODE	SW 1
ON DELAY	OFF
INTERVAL	ON

DIP SWITCH SETTINGS FOR TIME RANGE

RANGE	SW2	SW3	SW4
9.99 sec	OFF	OFF	OFF
99.9 sec	OFF	OFF	ON
999 sec	OFF	ON	OFF
99.9 min	OFF	ON	ON
999 min	ON	OFF	OFF
99.9 hr	ON	OFF	ON
999 hr	ON	ON	ON

DIP SWITCH SETTING EXAMPLE

Mode - INTERVAL

Range - 99.9 Sec.

NOTE : DIP switch for range and mode settings is on the side of the Instrument

Dimensions (All are in mm)

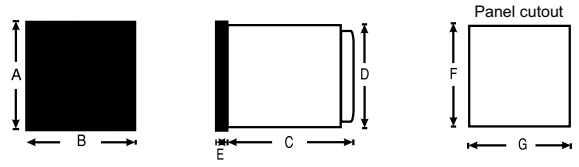

DIM	A	B	C	D	E	F	G
XT264A	76	76	83.7	67	3.5	69	69
XT364A	100	100	73	90.5	4	92	92

Ordering information

XT264A	RELAY (5A)	RELAY (5A)	90 to 270V AC/DC	- - -
XT364A	RELAY (5A)	RELAY (5A)	90 to 270V AC/DC	- - -